

READ AND UNDERSTAND THESE INSTRUCTIONS BEFORE INSTALLING FIXTURE

This fixture is intended for installation in accordance with the National Electrical Code and local regulations. To assure full compliance with local codes and regulations, check with your local electrical inspector before installation. To prevent electrical shock, turn off electricity at fuse box before proceeding.

Retain these instructions for maintenance reference.

INSTRUCTION SHEET NO.

IS:40620

R0194

Page 1 of 2

INSTRUCTIONS FOR INSTALLATION OF A.D.A. LUNA

COVERS FIXTURES: 40620, 40620N1, 40620H2

NOTE: This instruction sheet covers both compact fluorescent and incandescent type fixtures. Although illustration shows compact fluorescent version, the incandescent version assembles and installs the same.

BACKPLATE INSTALLATION:

1. Thread MOUNTING SCREWS into back of MOUNTING PLATE so MOUNTING SCREW HEADS tighten into recessed area of MOUNTING PLATE (Fig. 1).
2. Using the appropriate slots in MOUNTING PLATE, secure MOUNTING PLATE to OUTLET BOX using OUTLET BOX SCREWS (provided with OUTLET BOX).
3. While supporting BACKPLATE make connections: black fixture lead or fixture without tracer marks to hot (black) supply lead; white fixture lead or fixture lead with tracer marks to neutral (white) supply lead. Uninsulated fixture wire is a ground wire and must be connected to grounding terminal or ground lead inside OUTLET BOX. Use WIRE NUTS (local hardware item). Push supply wires and wirenut connections back into OUTLET BOX.
4. Position BACKPLATE over MOUNTING PLATE allowing MOUNTING SCREWS to come through the holes in BACKPLATE.
CAUTION: Make certain wires are not pinched between parts.
5. Secure BACKPLATE in position by installing the two BATTERY NUTS over MOUNTING SCREWS and tighten.
6. Install recommended lamp.

For Compact Fluorescent Units.

WARNING-(RISK OF FIRE) MOST DWELLINGS BUILT BEFORE 1985 HAVE SUPPLY WIRE RATED 60° C. CONSULT A QUALIFIED ELECTRICIAN BEFORE INSTALLATION.

NOTE: If supply wires are located within three inches of ballast, use wire rated for at least 90° C.

CAUTION: MAXIMUM WATTAGE AS MARKED ON FIXTURE MUST NOT BE EXCEEDED.

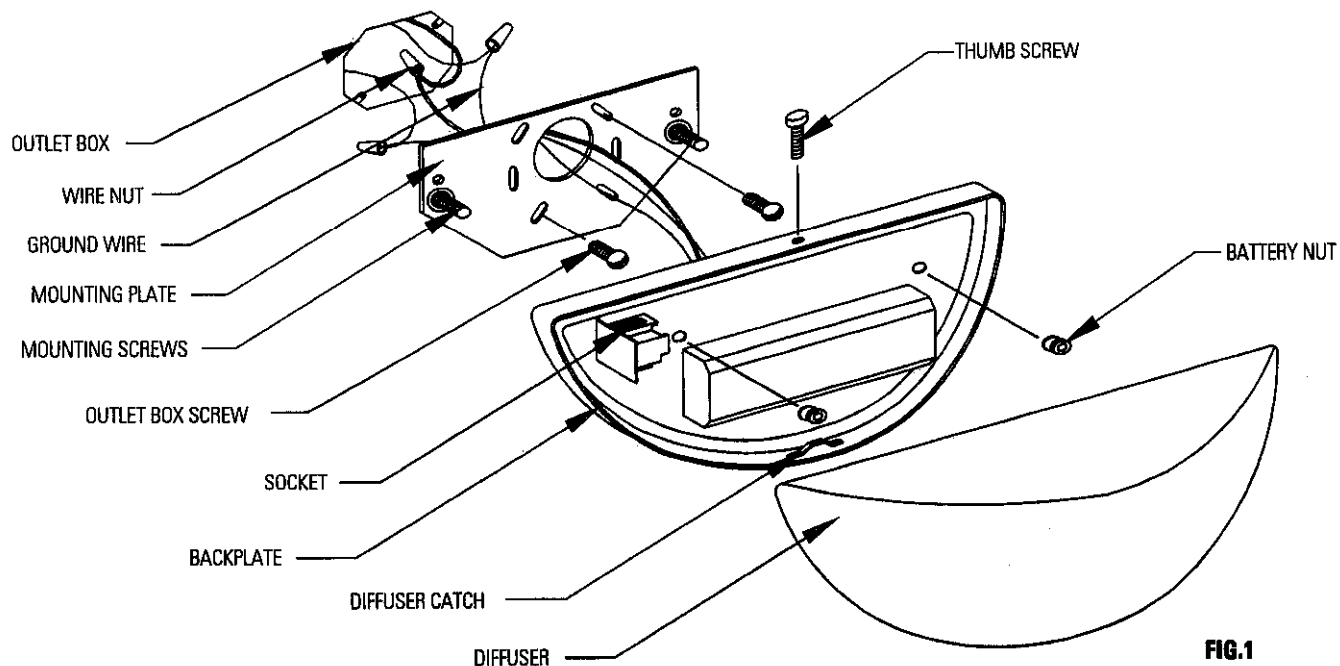


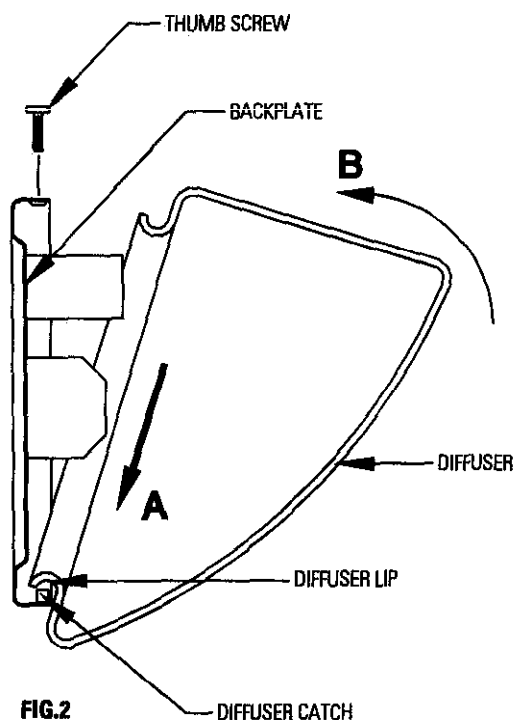
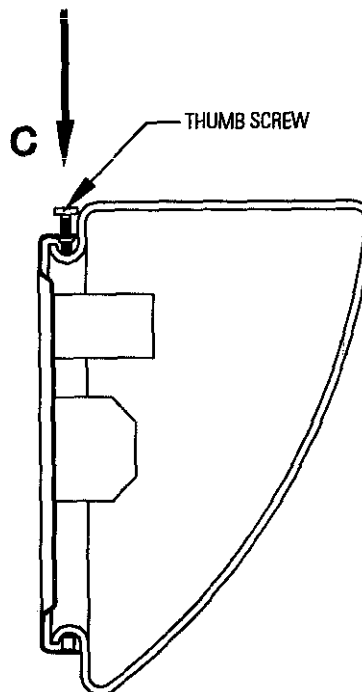
FIG.1

LIGHTOLIER® SECAUCUS, NEW JERSEY 07096
MONTREAL, QUEBEC, CANADA

DIFFUSER INSTALLATION:

1. Position DIFFUSER so that recessed area of DIFFUSER LIP hooks over DIFFUSER CATCH on BACKPLATE (Fig. 2).
2. Swing DIFFUSER back against BACKPLATE and secure DIFFUSER in position by threading THUMB SCREW, into hole in the top of BACKPLATE (Fig. 3).

CAUTION: Make certain that THUMB SCREW tightens into the recessed area of the DIFFUSER LIP (Fig.3). Do not over tighten THUMB SCREW. DIFFUSER damage could occur.

**FIG.2****FIG.3**